


DETALLE DE CONEXION DE LA CALDERA

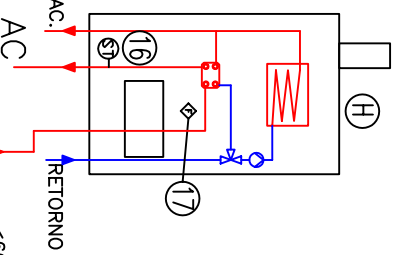

ESTRATEGIAS DE FUNCIONAMIENTO

FUNCION	CONDICIONES	ESTADO DE LOS EQUIPOS								
		4	5	7	8	10	11	12	13	
SOLAR → ALMACENAMIENTO	ST 1 > ST 3 > ST 4 +8	ON	ON	ON	ON	ON	ON	ON	ON	ON
	ST 1 y ST 3 > ST 4 +5	ON	ON	ON	ON	ON	ON	ON	ON	ON
FIN DEL ALMACENAMIENTO	ST 1 y ST 3 < ST 4 +3	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	ST 2 < ST 3 +4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
DISTRIBUCION A CONSUMO Y RETORNO DE ACS	ST 3 > 75°C	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	TERMOSTATO > 80°C	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
AEROREFRIGERADOR: ACTIVAR FON "Col-refrig" y "Termo 5". CONFIGURAR: Son-1a5 o 1, T5son o 105", T5soff o 110"	ST 19 > ST 3 +5									ON
	ST 19 < ST 3 +3									OFF

RE Retorno
IM Impulsión